





INSTRUKCJA MONTAŻU
ASSEMBLY INSTRUCTION
MONTEGEANLEITUNG
Инструкция по сборке

BRODZIKI NAKŁADANE NA POSADZKĘ


Shower trays placed on the floor
Duschwannen auf den Fußboden
Душевые поддоны с установкой на пол

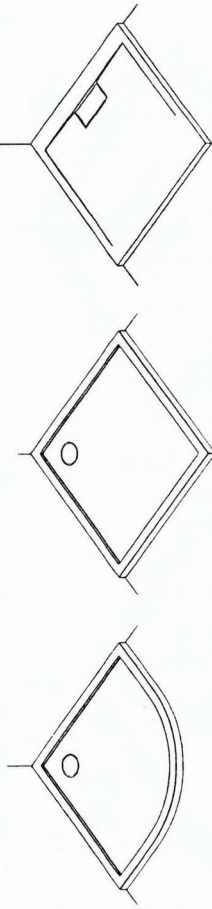


Nie montować wyrobu z widoczną wadą
Don't install the product with a visible defect
Produkt mit sichtbarem Defekt nicht installieren
Не устанавливать изделие с видимым дефектом

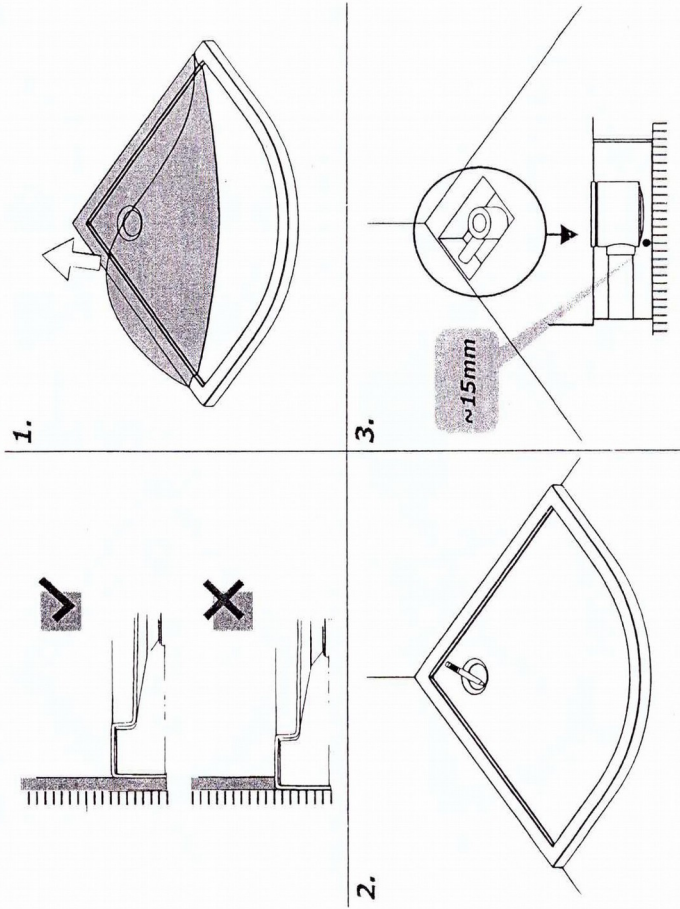


4.

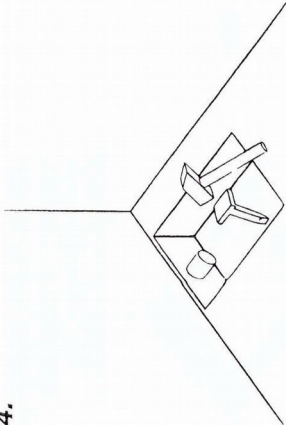


5.

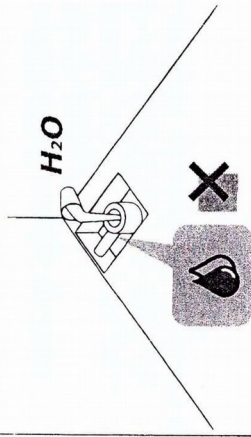


6.

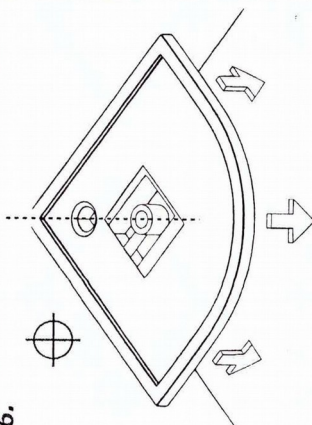


7.

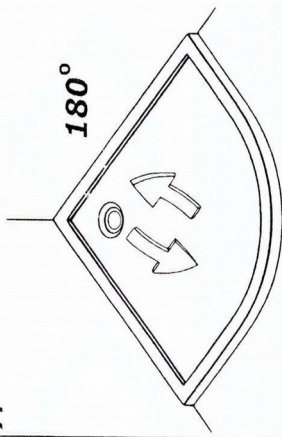


8.

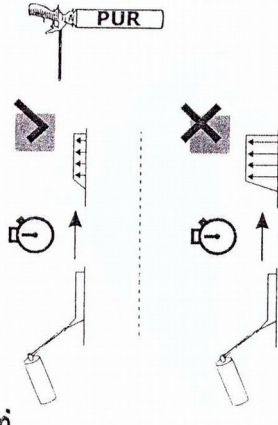


9.

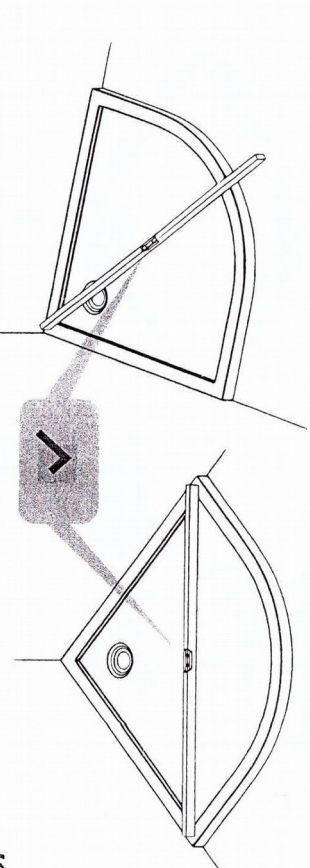


10.

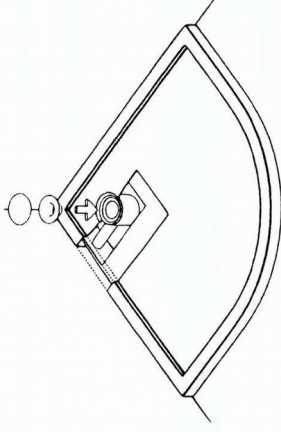


11.

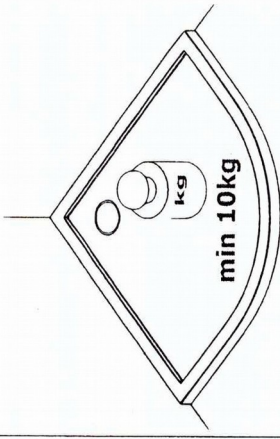

12.

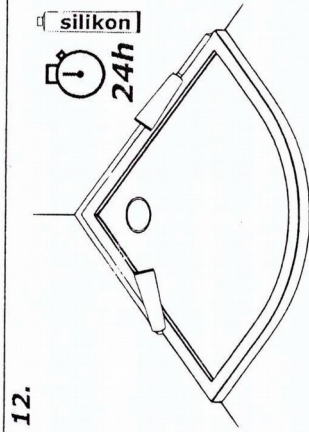

13.

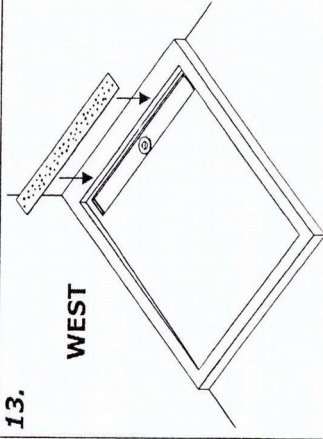

14.

